

KEY:

Dim. A: Controls the jaw alignment when 2+ vises are used side-by-side*

Dim. B: Controls the tram of the vise jaw relative to the fixture plate hole pattern*

Dim. C: This is the height of the built-in parallels above the fixture plate

Dim. D: Sets the max height of the jaw hardware (Reversible Jaw Insert, Castle Grip, etc.) above the built-in parallel

Dim. E: Controls the parallelism of the built-in parallel to the top of the fixture plate *These tolerances subject to minor differences in alignment pin & alignment bore fit.

